




Quick guide ROTAQLEEN Vario (72018 - 72021, 72090)


1. Setup

1. Click the ROTAQLEEN into the brush adapter of the telescopic pole
2. Connect the internal hose of the telescopic pole to the nozzles
3. Connect the ROTAQLEEN plug to the socket on the connection cable
4. Hook the connection cable into the cable clips on the pole

Caution: The blue connection must always be supplied with water to cool the motor!

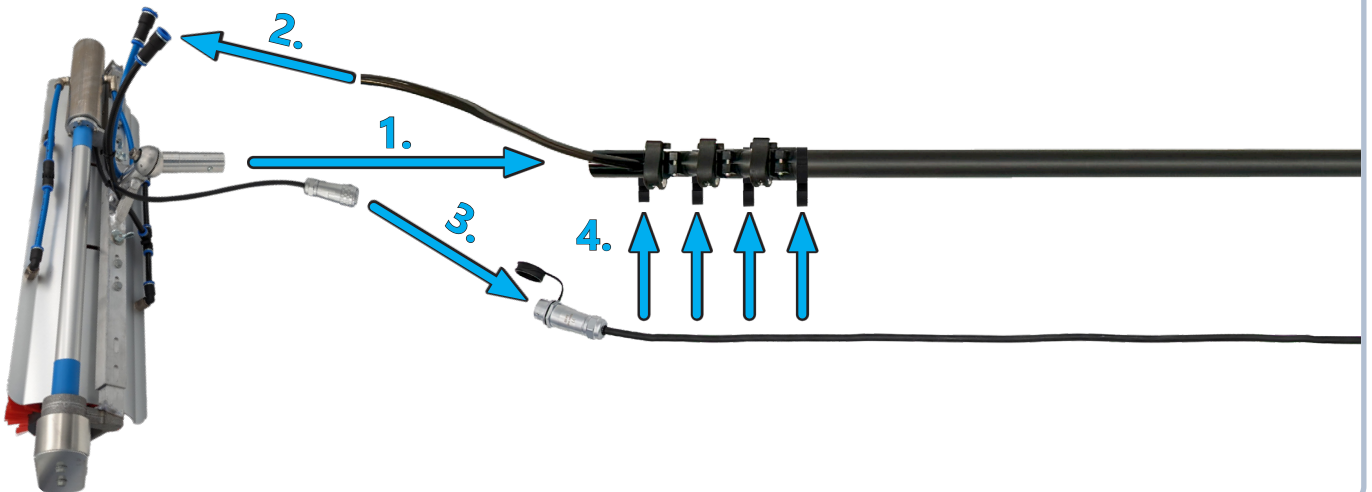

5. Connect the hose of the telescopic pole to the hose of the machine/bottle
6. Connect the connection cable to the power supply/backpack/machine

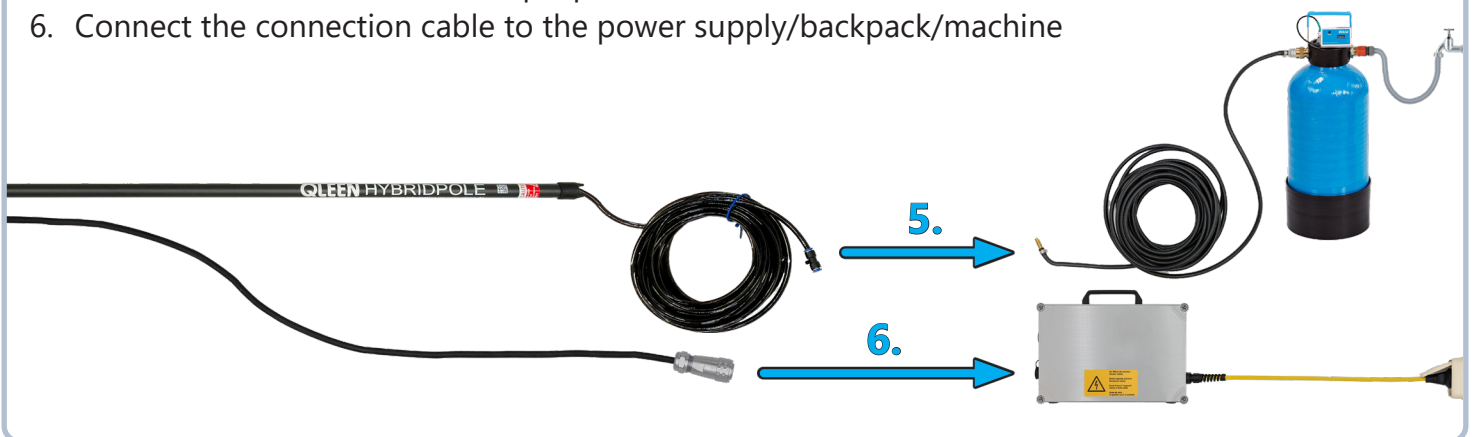

2. Handling

- Open the water supply
- Place the ROTAQLEEN on the surface to be cleaned and hold the poles with one hand

Switching on the ROTAQLEEN

- Briefly press the »ROTAQLEEN« button, the ROTAQLEEN button lights up **green** or **turquoise**
- ⇒ The ROTAQLEEN starts in the last selected running direction



Switching the running direction

- If the control button lights up **green**, the ROTAQLEEN runs forwards
- Briefly press the »ROTAQLEEN« button on the remote control, the ROTAQLEEN button lights up **turquoise**

⇒ The ROTAQLEEN switches to reverse mode




- If the control button lights up **turquoise**, the ROTAQLEEN runs backwards
- Briefly press the »ROTAQLEEN« button on the remote control, the ROTAQLEEN button lights up **green**

⇒ The ROTAQLEEN switches to forward mode



- The ROTAQLEEN Vario can be steered in the appropriate direction by simply turning the telescopic pole

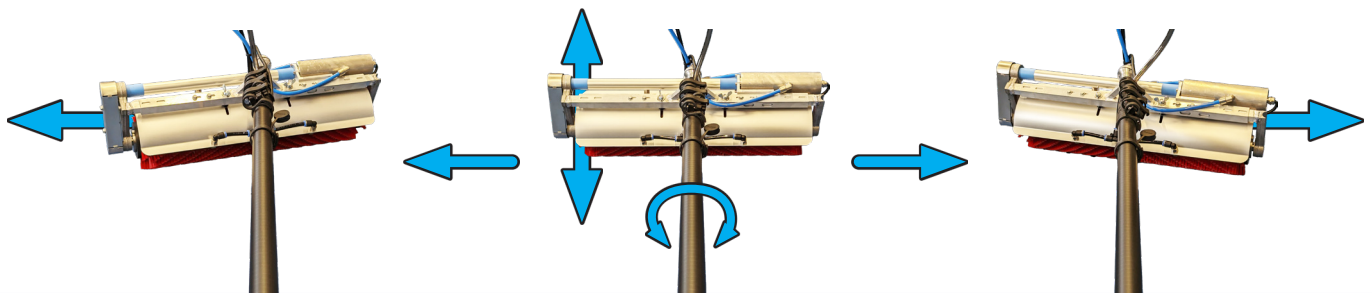

Switching off the ROTAQLEEN

- Briefly press the »ROTAQLEEN« button, the ROTAQLEEN button lights up **blue**

⇒ The ROTAQLEEN stops



Karlhans Lehmann KG, Kranichstraße 2a, DE -17235 Neustrelitz

Homepage: www.qleen.de
Phone: +49 (0)3981 48850
E-Mail: info@qleen.de